
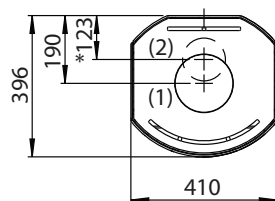



Fig. 1a

Jøtul F 130 Series



Jøtul F 134 (with base / without sideglasses)

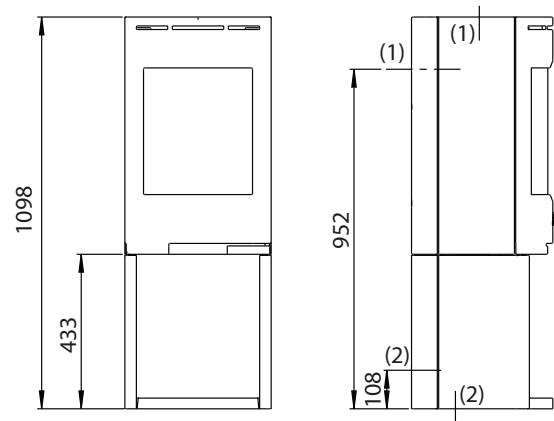

(1) - Flue pipe center
(2) - Outside air connection center

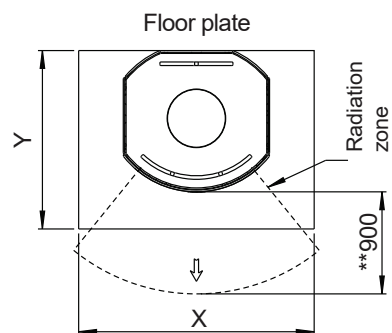



Jøtul F 136 (with pedestal without sideglasses)

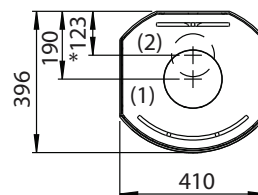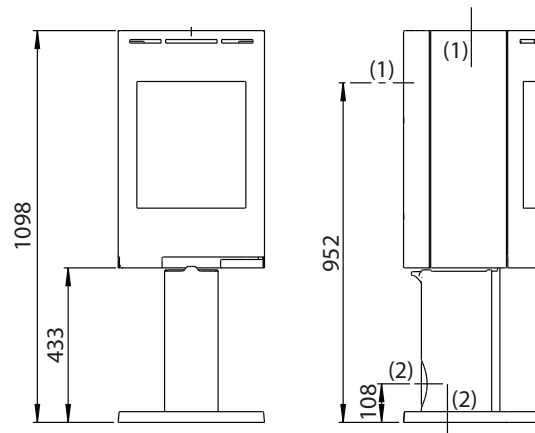

Min. measurements floorplate
X / Y = According to national laws and regulations

Combustible wall

Min. distance to combustible wall

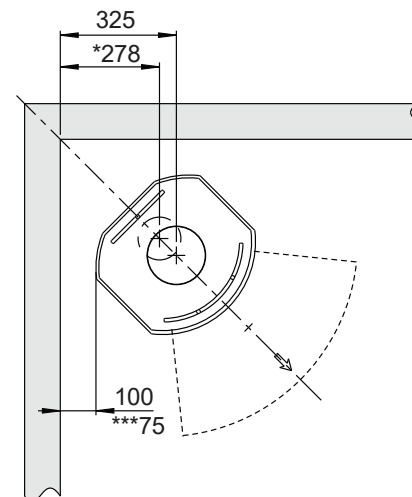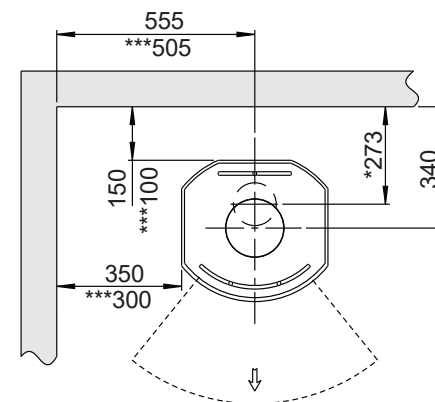

* Outside air connection
** Min. distance to furniture / combustible material
*** Distance to combustible wall with semi-insulated / shielded flue pipe


900189-P01

Fig. 1b


Jøtul F 130 Series

Jøtul F 134 / F 136 - min. distance to firewall

External

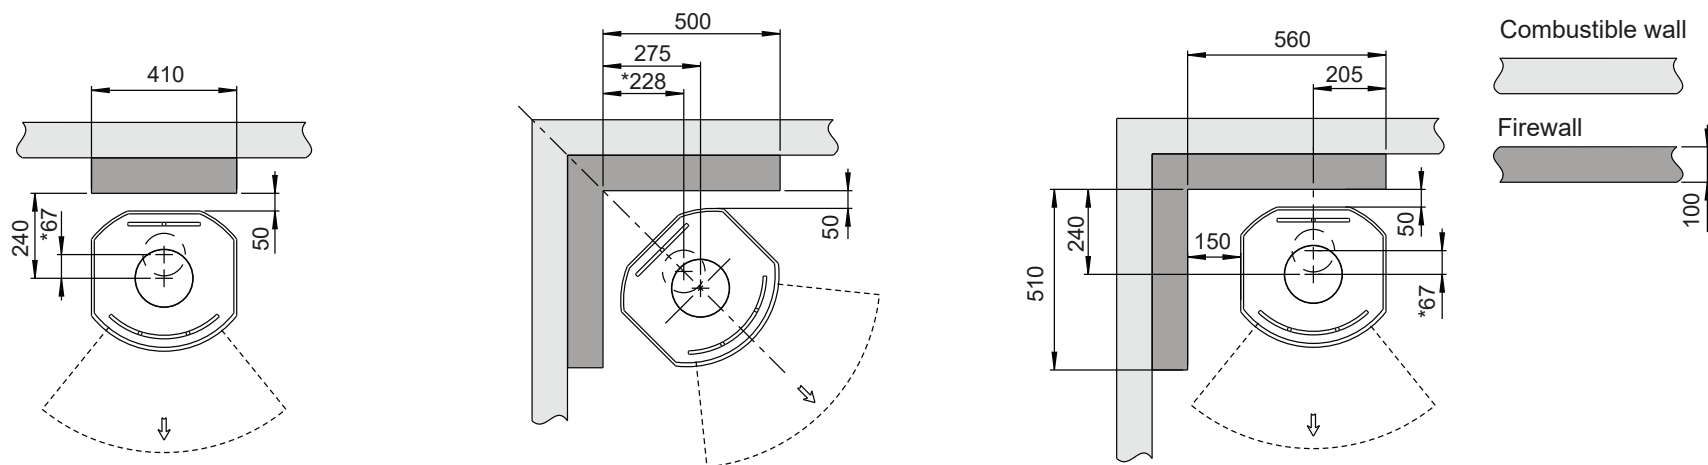

Integrated

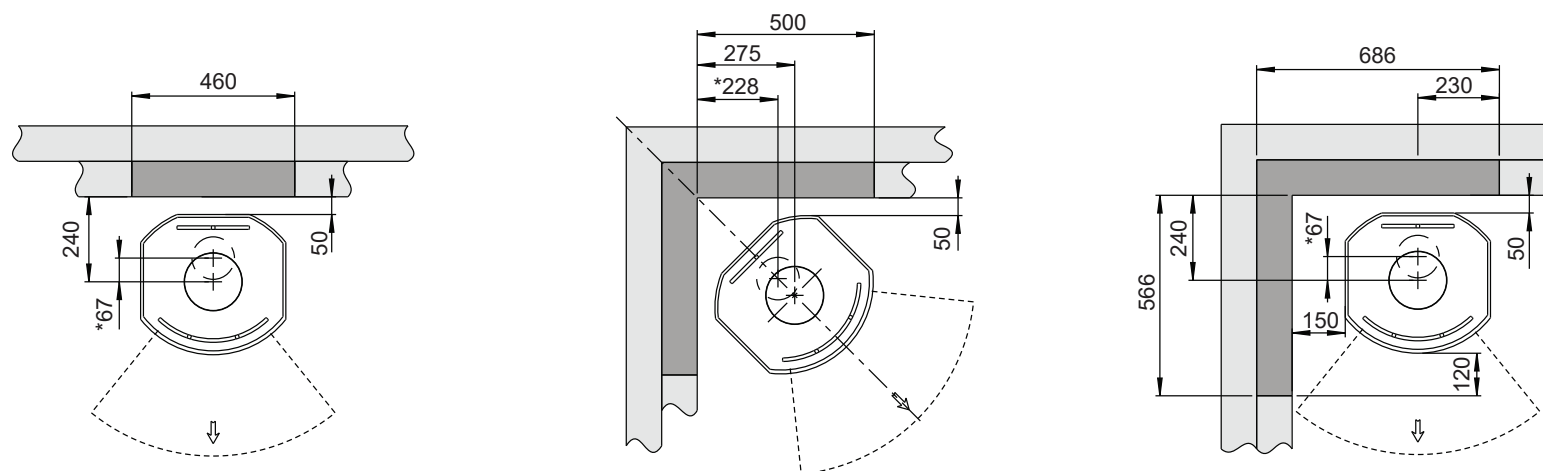

* External air supply

900189-P01